





Fall protection equipment set

- 1 Harness with front and rear fall arrest attachment element
- 1 Y-shaped lanyard with shock absorber
- 1 Core-mantle dynamic rope
- **1** Belay device
- **1 Rope protection**
- **15 Round slings**
- 15 Carabiners (twist lock)
- 2 Carabiners with automatic double lock
- 1 Transport bag









Full body harness (EN 361)





- Front and rear fall arrest attachment element
- One size fits all
- side gear loops
- Quick release buckles on the chest and leg straps





Lifelong Learning Programme

Dynamic Kernmantel rope 11 mm




- EN 892
- **60**m
- Diameter 11mm
- 12 standard falls
- Sewn connections on the ends
- Elongation 30 %
- Catch impact < 10 kN
- Tested on sharp edges
- Green and red marking at he end





4

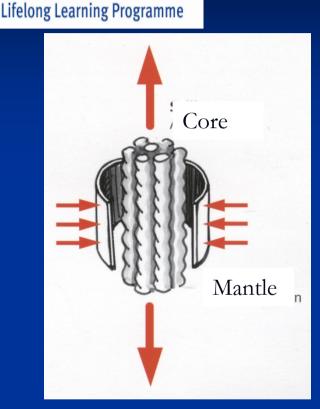

The core essentially takes over the load and dynamic function

The mantle has primarily the task to protect the core against mechanical abrasion and other external influences











EUSR-MED



Dangers in use





- Avoid contact with:
- hot surfaces
- sharp edges
- Sparks
- Oils, fats, acids, alkalis
- Debris etc.

For your own safety!




EUSR-MED

Roundslings (EN 566)



- endless stitched
- Tensile strength of at least 22 kN
- Length 100 cm
- Year of manufacture sewn on





EUSR-MED



HMS Carabiner (EN 362)



- Screw or multiple shutter
- Aluminum or steel
- Minimum longitudinal breaking strength 22kN
- Marking on the carabiner










Markings on the carabiner

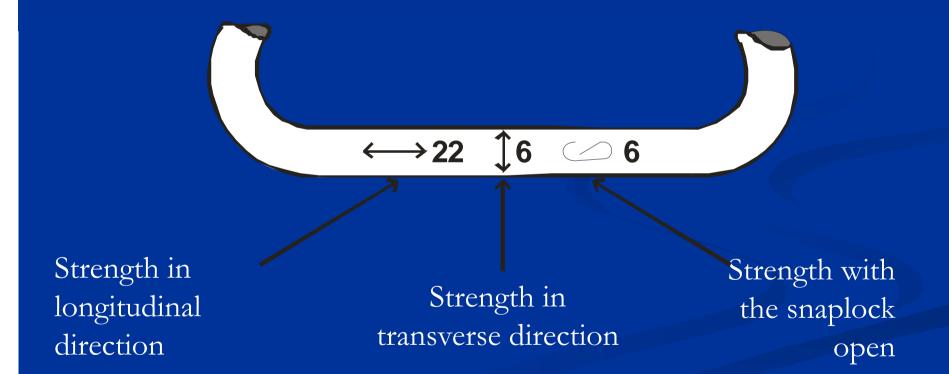







Omni Triact connecting element(EN362 B)

Connecting element with limited use



For connection of two fastenings of a harness with a fall protection system









Omni Triact Connector



Connector for closing the harness



Connector with energy absorber





Lifelong Learning Programme

Omni Triact Connector



Connector with energy absorber and safeguard rope



EUSR-MED



Belay device I'D (EN 341 Typ A)



Valid for rope diameter from 10 to 11.5 mm 30 -150 Kg static work load 1 multiple lock karabiner









Education and Culture DG

Lifelong Learning Programme

Open I'D with rope laid in

Sealed I'D





EUSR-MED



Self belay (EN 355)



Y- sling

- Shock absorber
- carabiner with multiple closure
- 2 Scaffold hooks
- Only for use in the front fall arrest attachment element of the harness!
- Forbidden to extend !!